

**MILL LOOSE ON STAND
INSTRUCTIONS:**

To establish mill head to the stand
tighten screw at the base of the mill
head with a wrench (SEE BELOW)

